
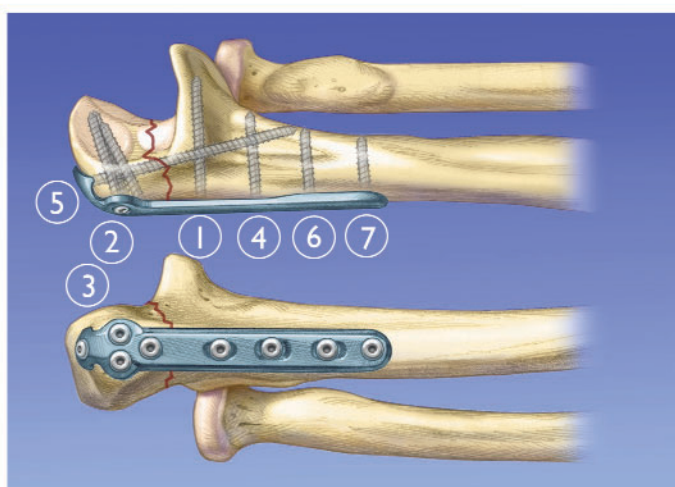



MAYO CLINIC CONGRUENT PLATES

Screw Insertion Order

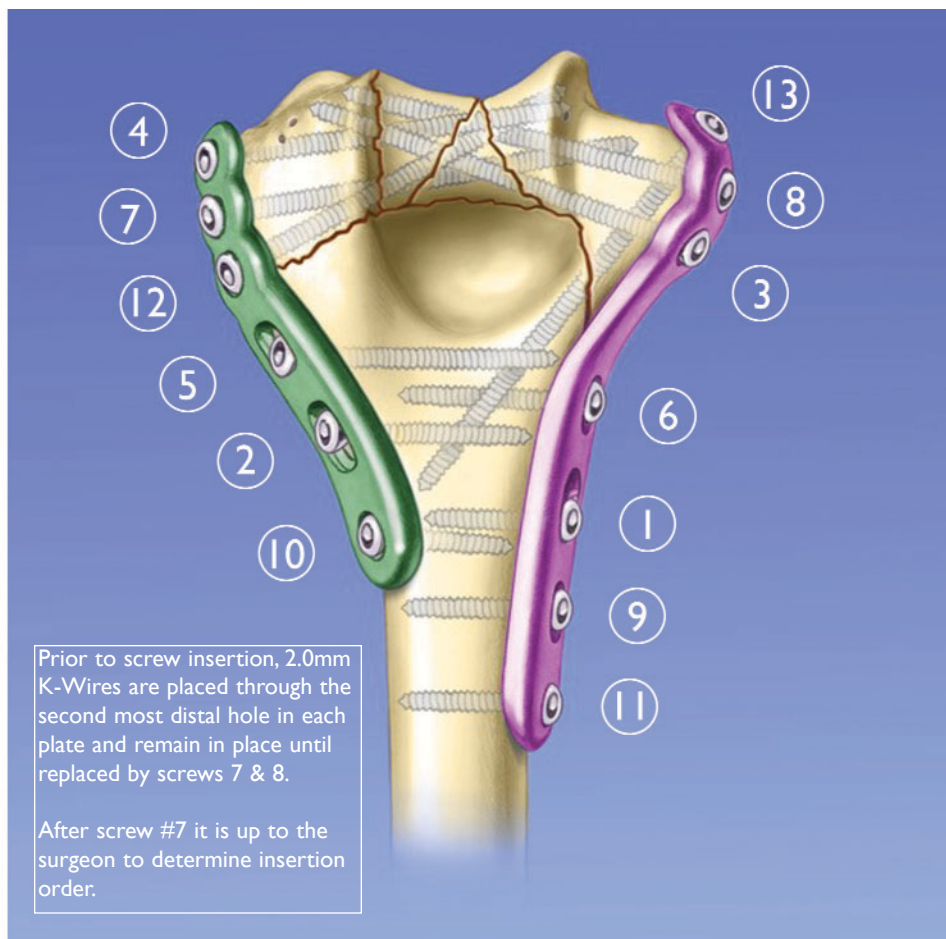

Prior to screw insertion, a 2mm K-Wire is placed in the most proximal hole and advanced in the same direction as future screw #5.

After screw #4 it is up to the surgeon to determine insertion order.

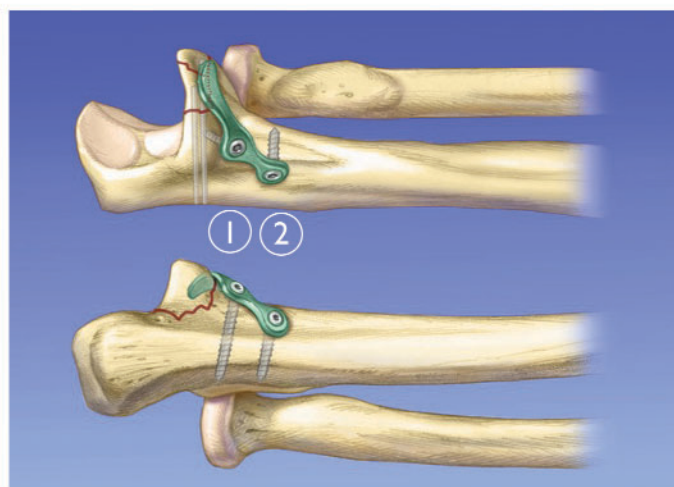

Prior to screw insertion, the coronoid fragment(s) are stabilized with threaded titanium wires driven posteriorly to anteriorly. These wires will remain in place after being cut and burred.